


Pump Assembly, Lumbar Support, Drivers Seat, Replace



Remove

1. Remove pump (1) from valve (3)
 - Pull off
2. Release valve from support bracket (2) on drivers seat
 - Pull out
3. Disconnect valve from hose (4)

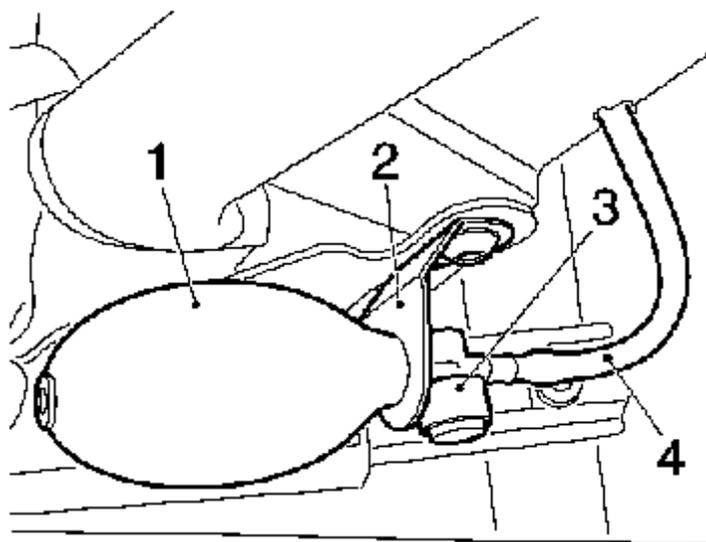

S 0006367



Install

4. Install new valve to hose
 - Push fit
5. Secure valve to support bracket on drivers seat
 - Push on
6. Install pump to valve
 - Push on