


Parking Brake

The parking brake lever is floor-mounted and is connected through a cable, a compensator and a single cable to the rear brake calipers.

The parking brake lever is equipped with a switch, which is connected to a telltale in the instrument panel.

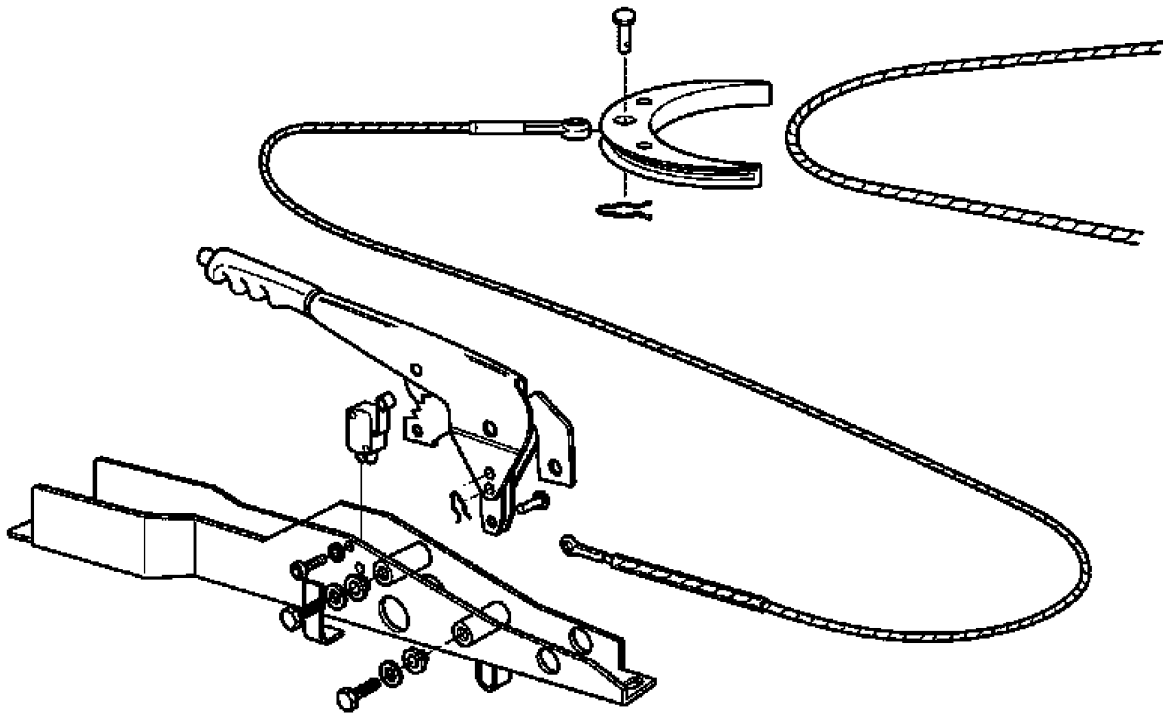


T 8987

8.4 Parking Brake (continued)

• Service

The adjuster for the parking brake lever is located in the rear cable on the underside of the vehicle. The undertray must be removed to gain access to the adjuster.

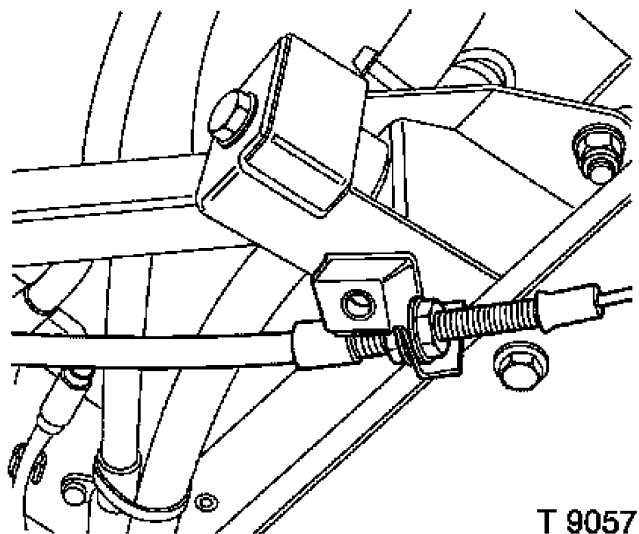

T 9057

