

# Inspection and Adjustment Operations

## Brake System, Bleed

Remove cover from brake fluid reservoir (1), screw on brake bleeding connections.

Connect bleeding equipment to brake bleeding connector.

Build up pressure in brake system - follow manufacturer's instructions supplied with brake bleeding equipment.

Use only DOT 4 specification brake fluid.



### Important!

On vehicles equipped with ABS, remove ABS fuse from fuse holder. This is in order to permit correct bleeding.

If complete system is to be bled, commence at point furthest away from reservoir.

Open bleed nipple, close when bubble-free fluid flows out.

Disconnect bleeding equipment - release any residual pressure.

Top up fluid level in reservoir, check brake system for leaks - see operation "Brake System, Inspect for Leaks".

