

Brake Pads, Front, Replace



Remove

Wheel from vehicle – bolts.


Brake pads from brake caliper – retaining clips, pins (1 and 3), anti-rattle plate (2).



Inspect

Caliper pistons – push caliper pistons fully into brake caliper.

If there is any sign of fluid leakage from a piston seal, replace brake caliper.

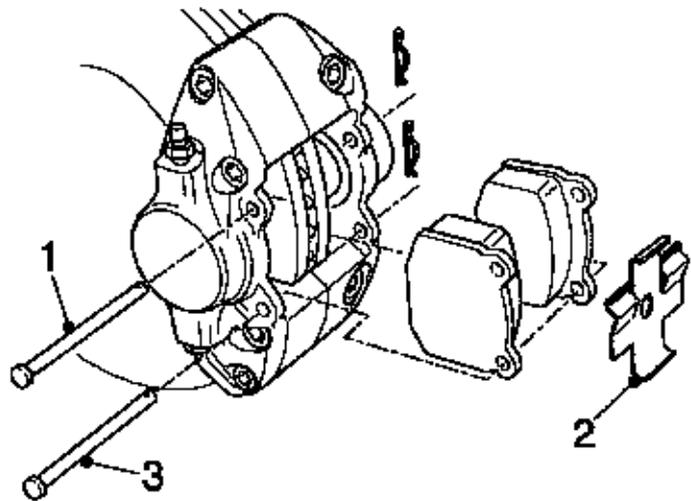

T 8768



Clean

Brake pad recess in brake caliper – avoid dust inhalation.



Install

Brake pads to brake caliper – anti-rattle plate (2), pins (1 and 3), retaining clips.

Wheel to vehicle – bolts **90 Nm**.




Adjust

Caliper pistons and brake pads – operate brake pedal several times to reset.



Inspect

Fluid level in master cylinder reservoir – correct if necessary.

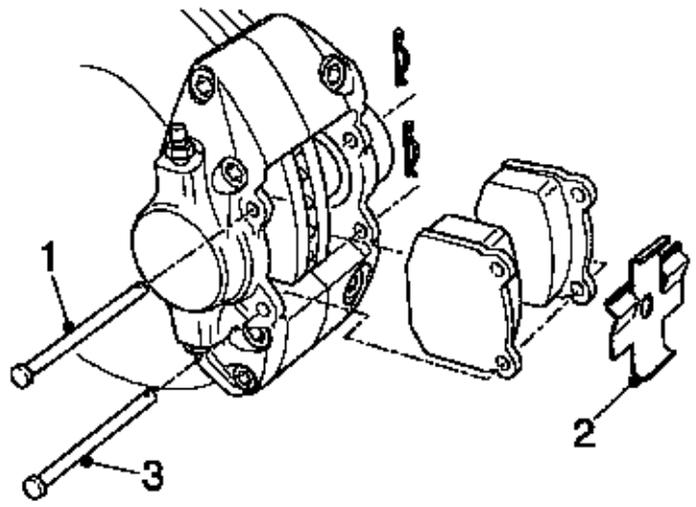

T 8768