

## Brake Disc, Rear, Remove and Install



### Remove


Brake pads – see operation "Brake Pads, Rear, Replace".

Brake disc from wheel hub – one screw.



### Clean

Mating face between brake disc and wheel hub.

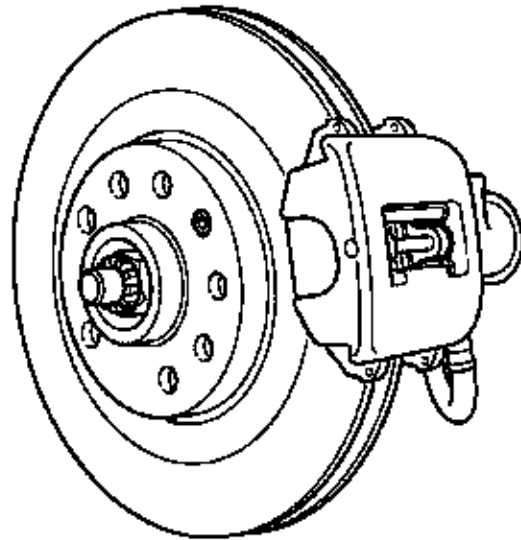

T 8775



### Install

Brake disc to wheel hub – one screw.

Brake pads – see operation "Brake Pads, Rear, Replace".