


Check Valve, Replace



Remove

1. Remove check valve (2) from brake servo
 - Disconnect vacuum hose (1)
 - Pull out check valve

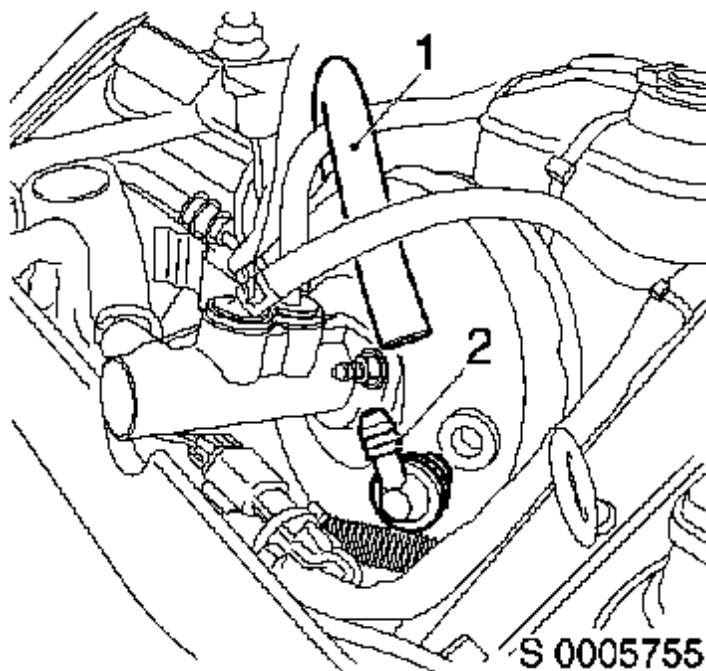

Install

2. Install check valve to brake servo
 - Push fit
 - Connect vacuum hose