

Transmission Shift Linkage, Adjust



Remove

Gear shift trim from vehicle.



Adjust


Position transmission in neutral.

Cable settings – loosen nuts (1) and adjust cables.



Install

Gear shift trim to vehicle.

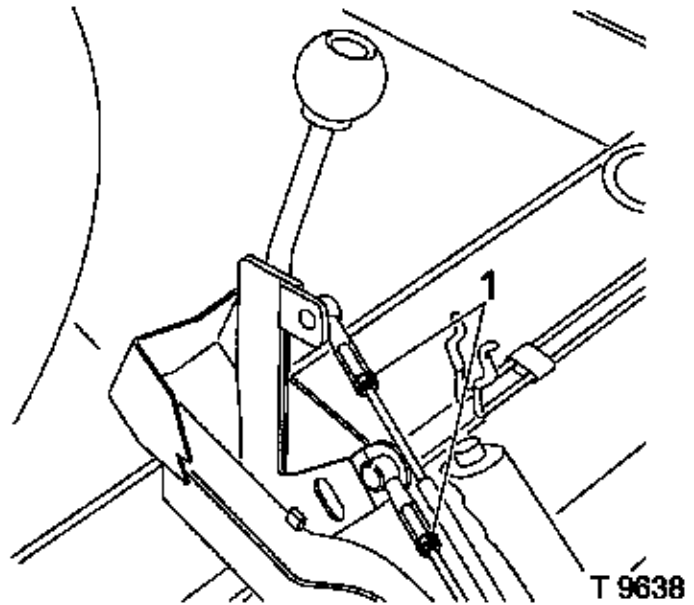

T 9638