

Transmission Fluid, Drain and Refill



Remove


Drain plug (1) from transmission – drain fluid into suitable container.



Install

Drain plug to transmission – **35 Nm**.

Refill transmission to correct level – see operation "Transmission Fluid Level, Check and Correct".

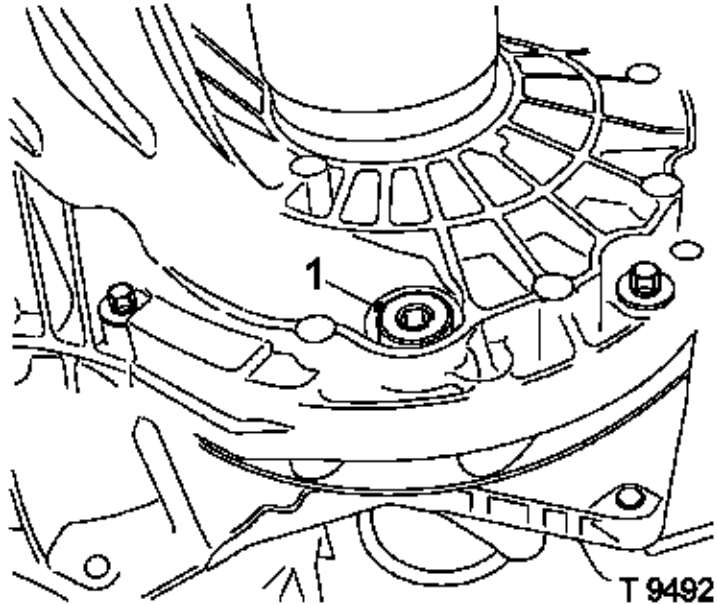

T 9492