

Gearshift Lever, Remove and Install



Remove

Centre console – see operation "Centre Console, Remove and Install" in group C.

Selector and cross shift cables (1) from shift lever and support bracket.


Shift lever with support bracket from floor pan – bolts.



Install

Shift lever with support bracket to floor pan.

Selector and cross shift cables (1) to shift lever and support bracket.

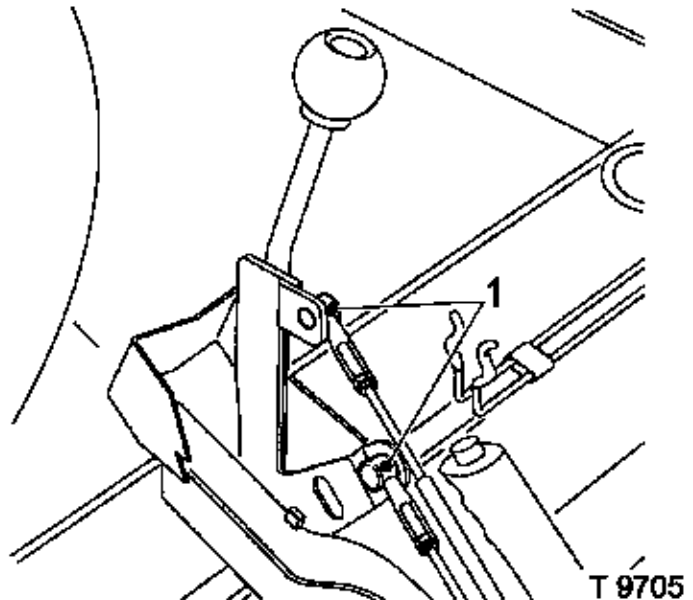

Adjust

Transmission shift linkage – see operation "Transmission Shift Linkage, Adjust".



Install

Centre console.