

Reversing Lamp Switch, Remove and Install



Remove, Disconnect

Harness connector (1) from switch.

Switch from transmission.



Install, Connect


Coat thread of switch with surface sealant (green) and screw switch into transmission - 20 Nm.

Harness connector (1) to switch.



Inspect

Level of transmission fluid and correct if necessary - see operation "Transmission Fluid Level, Check and Correct".

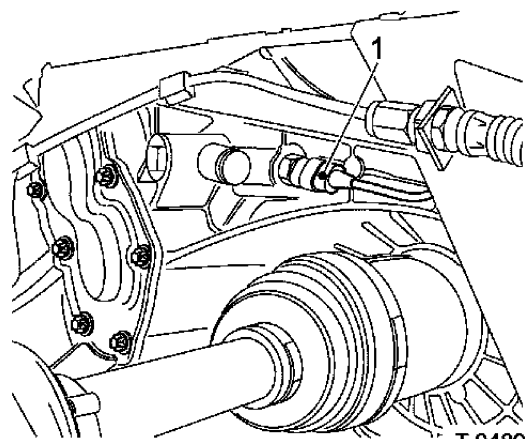

T 9489