

Clutch Plate and/or Pressure Plate, Remove and Install



Remove

Transmission – see operation "Transmission, Remove and Install".

Lock flywheel with **KM-652** (1), then release pressure plate and disc from flywheel – bolts (arrowed).




Install

Pressure plate and disc to flywheel – use Clutch Aligning Guide **KM-736** (2), locate pressure plate over centring pins. Use new bolts – **15 Nm**.

Transmission.

Bleed clutch hydraulics – see operation "Hydraulic Clutch Bleed".

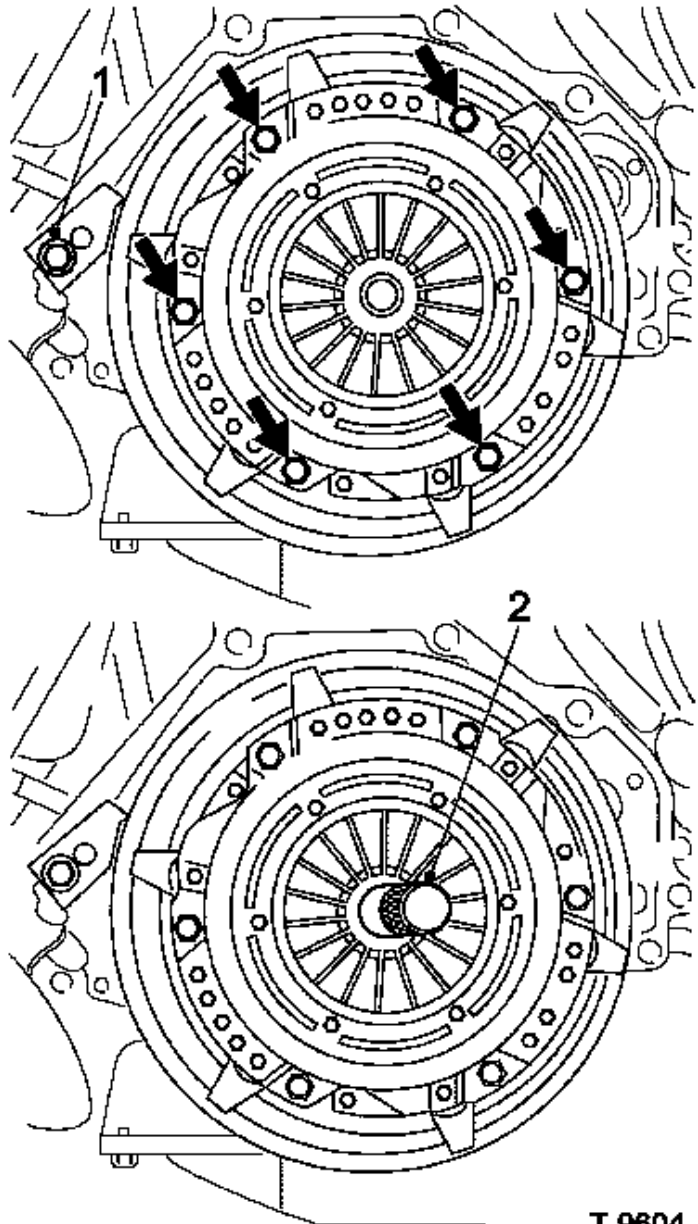

T 9804