

## Central Release, Remove and Install



### Remove

Transmission – see operation "Transmission, Remove and Install".

Pressure line (1) from central release.

Central release from clutch housing – bolts (arrowed).



### Inspect

Seal ring on central release for damage.

Note: central release and release bearing is one part. Overhauling is not possible. If damaged or leaking replace entire part.

Coat seal rings in central release with transmission fluid.



### Install

Central release to transmission housing – bolts (arrowed) **5 Nm**.

Pressure line (1) to central release – **14 Nm**.

Transmission – see operation "Transmission, Remove and Install".

Bleed clutch hydraulics – see operation "Hydraulic Clutch Bleed".

