
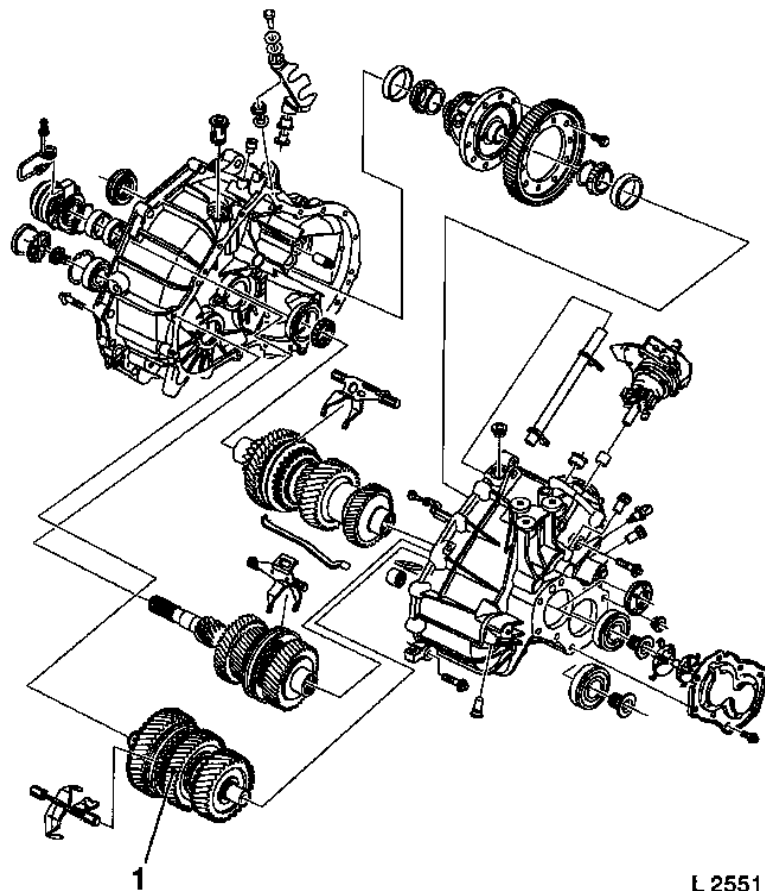


Intermediate Shaft, Remove and Install

1. Illustration of intermediate shaft
 1. Intermediate shaft

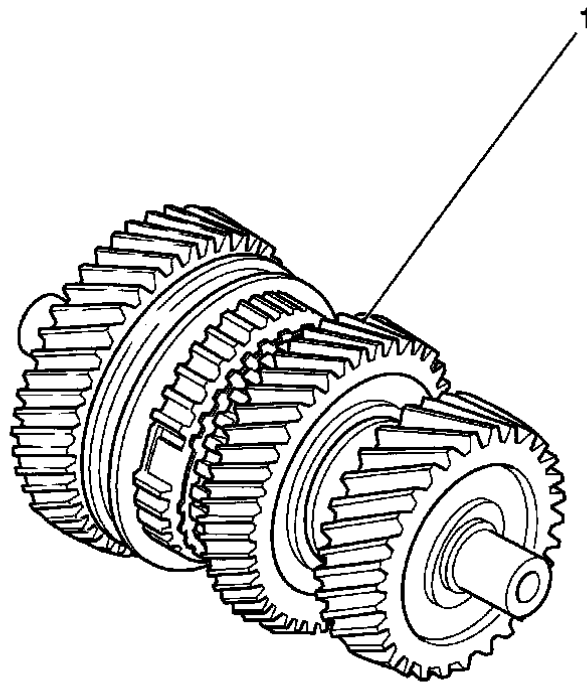

2. Remove transmission - see operation "Transmission, Remove and Install"
3. Disassemble transmission - see operation "Transmission, Seal Completely"
4. Inspect intermediate shaft (1) for wear and damage; replace if necessary

**L 2624**

5. Assemble transmission - see operation "Transmission, Seal Completely"
6. Install transmission - see operation "Transmission, Remove and Install"