


Shift Forks, Remove and Install



1. Illustration of shift fork

1. Gear shift fork
5th /reverse gear
2. 3rd/4th gear shift
fork
3. 1st/2nd gear shift
fork

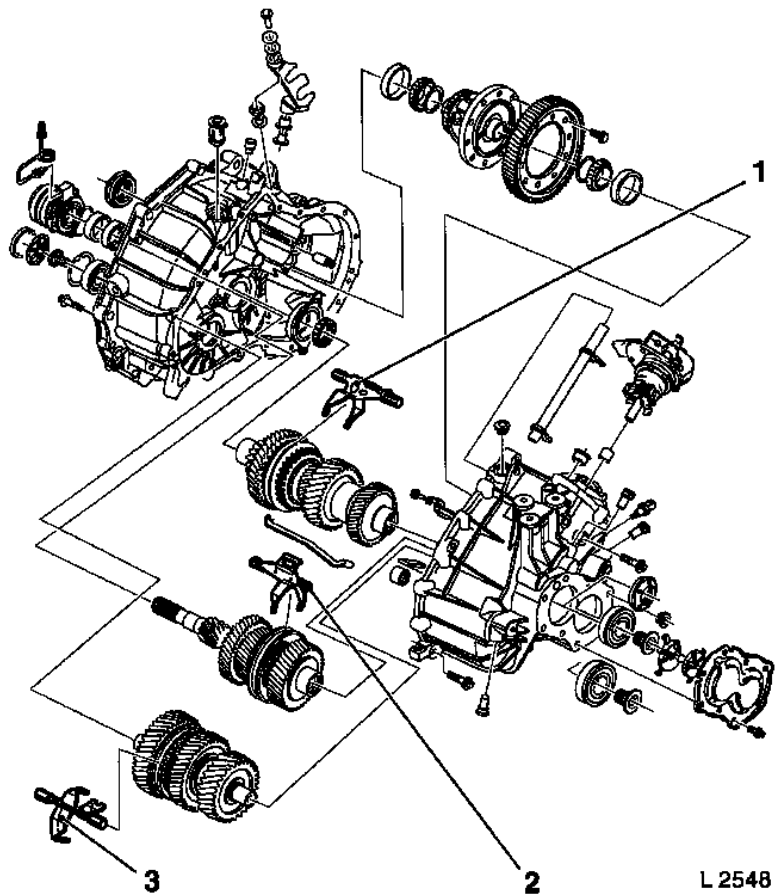

L 2548

2. Remove transmission from vehicle - see operation "Transmission, Remove and Install"
3. Disassemble transmission - see operation "Transmission, Seal Completely"
4. Inspect relevant gear shift fork. If plastic parts in hatched area are worn, or damaged, or if gear shift fork is damaged in any way, then gear shift fork must be replaced
 1. 1st/2nd gear shift fork
 2. Gear shift fork
5th /reverse gear
 3. 3rd/4th gear shift
fork

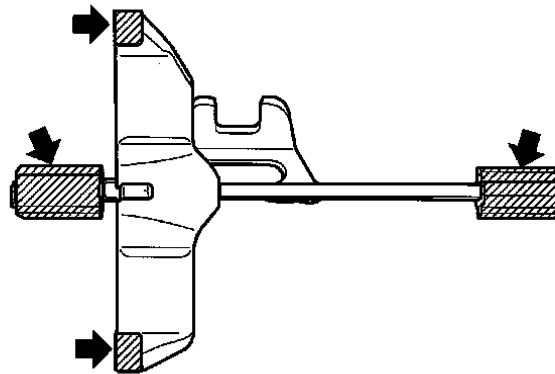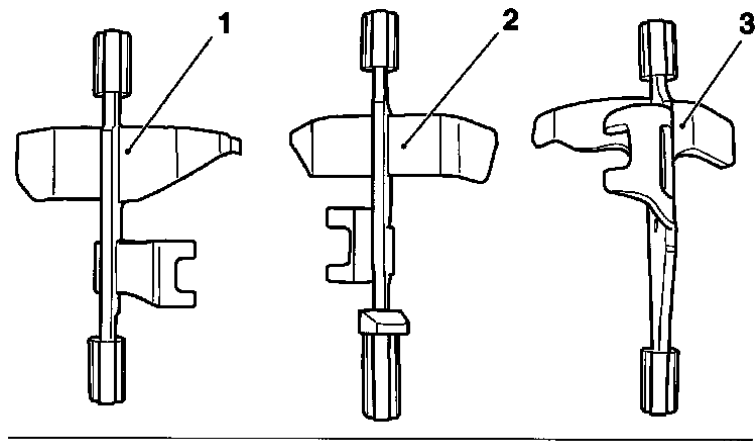

L 2626

5. Assemble transmission - see operation "Transmission, Seal Completely"
6. Install transmission in vehicle- see operation "Transmission, Remove and Install"