


## Fuse Box

The fuse box is located in the front compartment.

On left drive vehicles, the fuse box is on the right side. On right drive vehicles, the fuse box is on the left side.

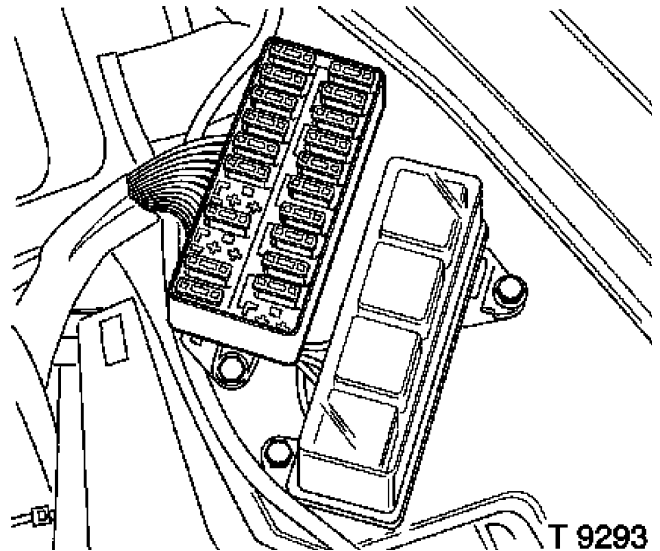

T 9293

Single fuses are located in the vehicle as follows:

- In the load compartment, adjacent to the relays.
- At the instrument panel.