


## Relays

Relays are located at various locations in the vehicle.

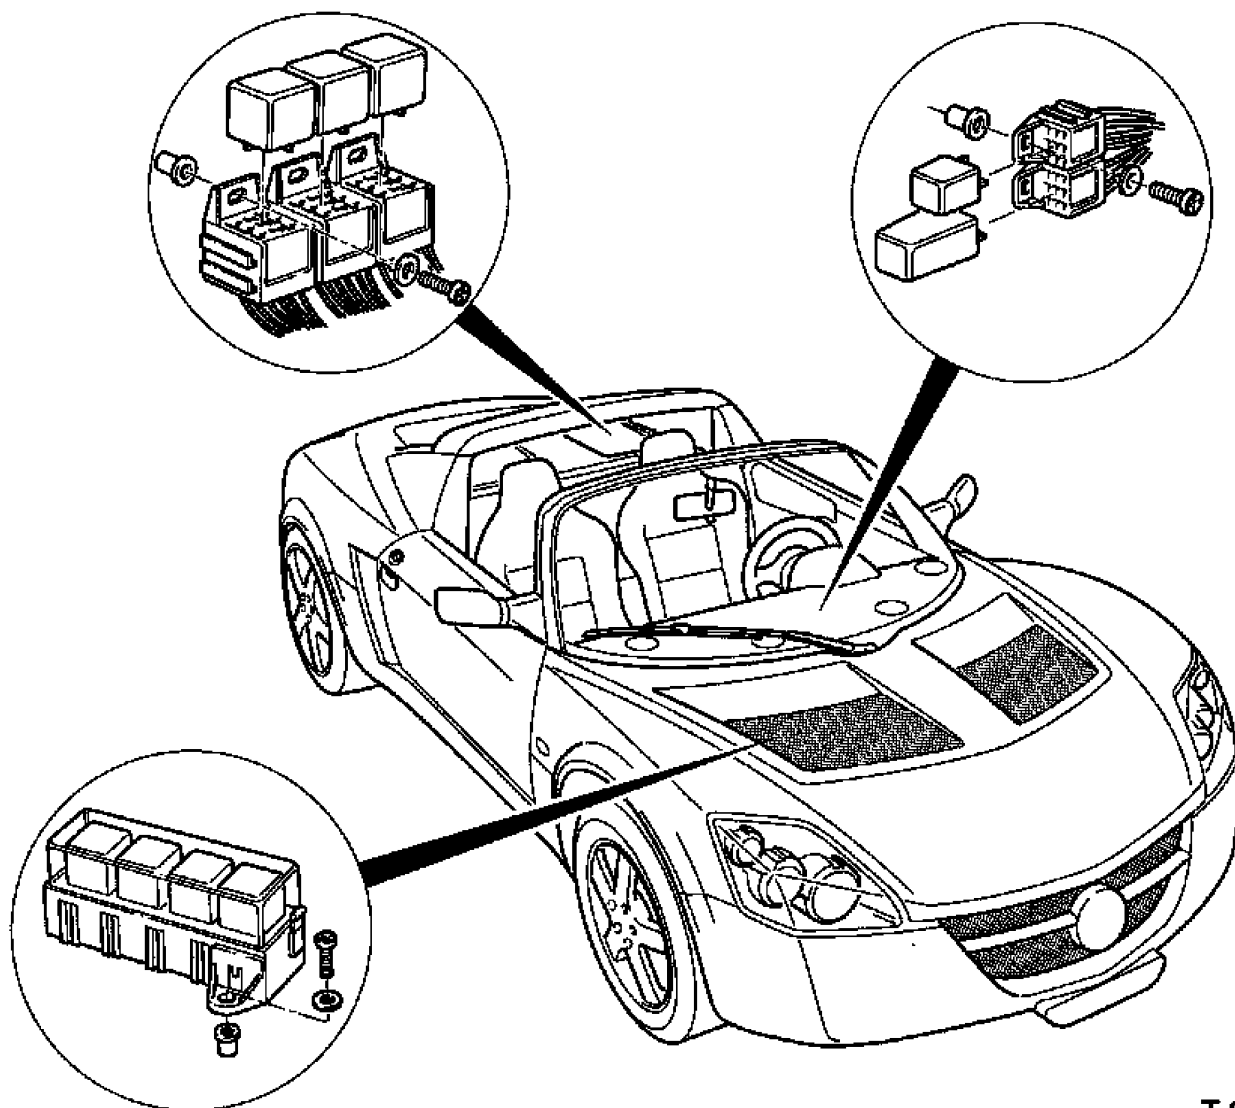

T 9305