

Function

Arming ATWS

The anti-theft warning system is armed by means of the remote control. When arming the system, the turn signal lamps flash twice, then, after 30 seconds, the system becomes active and the light emitting diode in the centre console flashes.