


Diagnostic Connector

The diagnostic connector is located under the instrument panel.

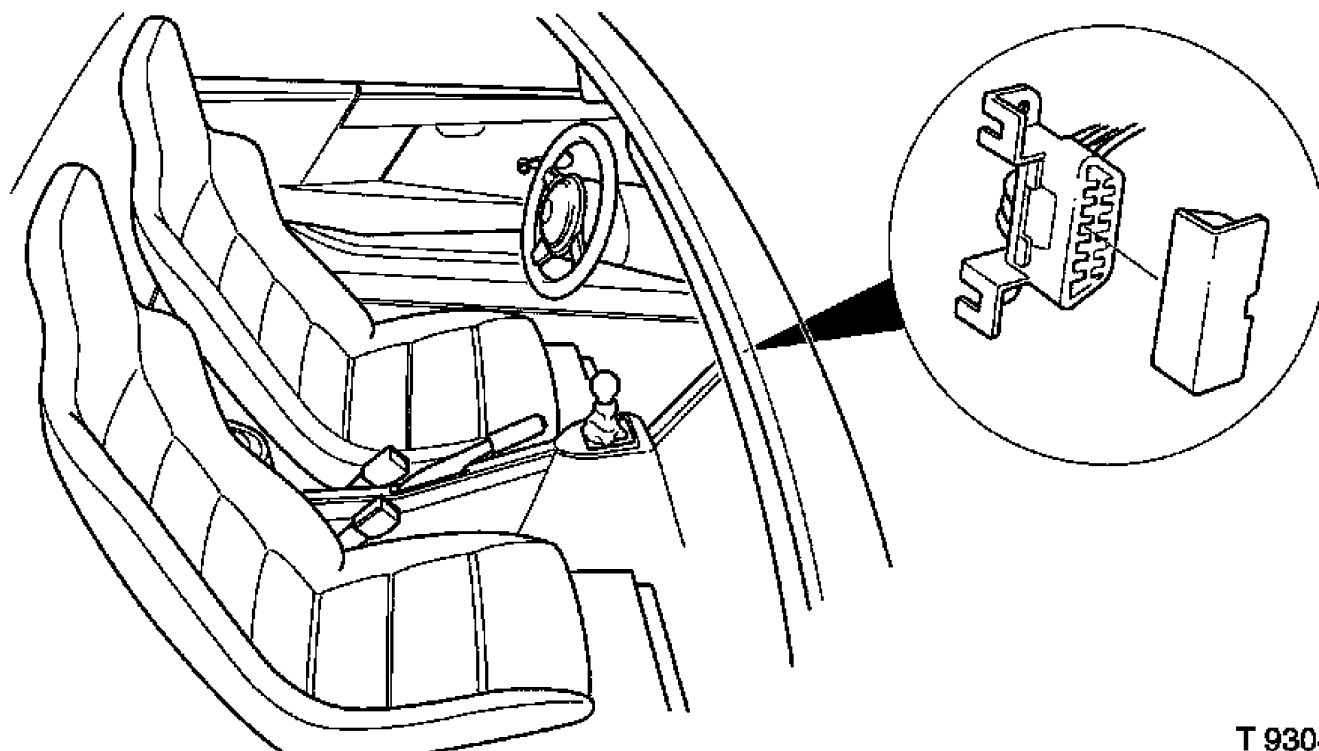

T 9304