

## Fuse Box, Remove and Install



### Remove

Fuse box from wheel arch – bolts.


Harness connectors from fuse box.



### Install

Harness connectors to fuse box.

Fuse box to wheel arch – bolts.

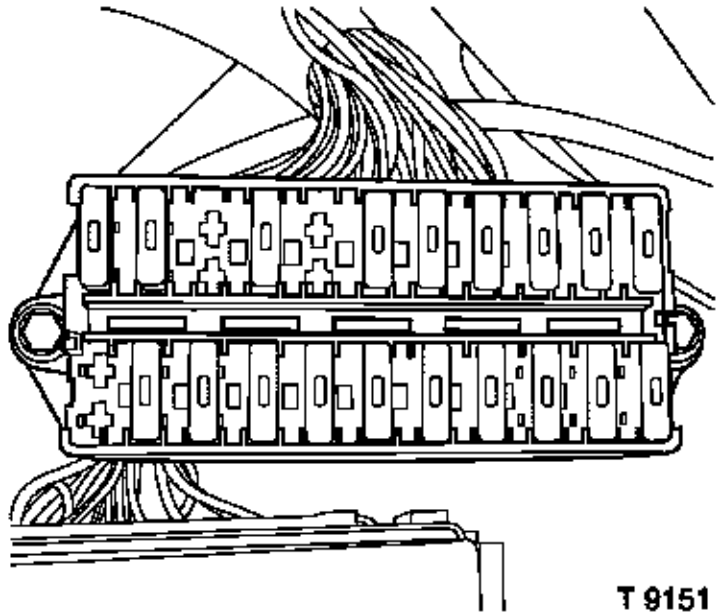

T 9151