

## Bulb, Headlamp, Replace

Open front bonnet for access to nut at rear of front lamp assembly.




### Remove

Front lamp assembly from front clam shell – nut, washer, bracket and harness connector.

Trim cover from front lamp assembly – screws.

Harness connector from bulb.

Bulb from lamp.

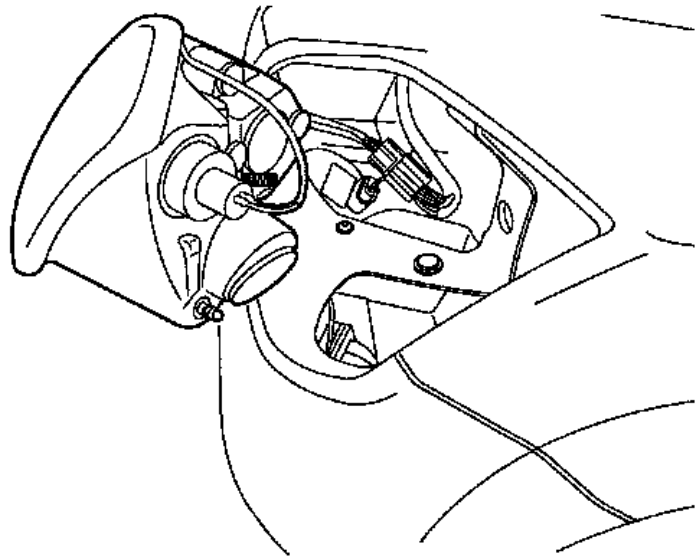

S 0784



### Install

Bulb to lamp.

Harness connector to bulb.

Trim cover to front lamp assembly – screws.

Front lamp assembly to front clam shell – harness connector, bracket, washer and nut.