

## Front Turn Signal Lamp, Remove and Install

Open front bonnet for access to nut at rear of front lamp assembly.




### Remove

Front lamp assembly from front clam shell – nut, washer, bracket and harness connector.

Trim cover from front lamp assembly – screws.

Harness connector from bulb.

Turn signal lamp from front lamp assembly.

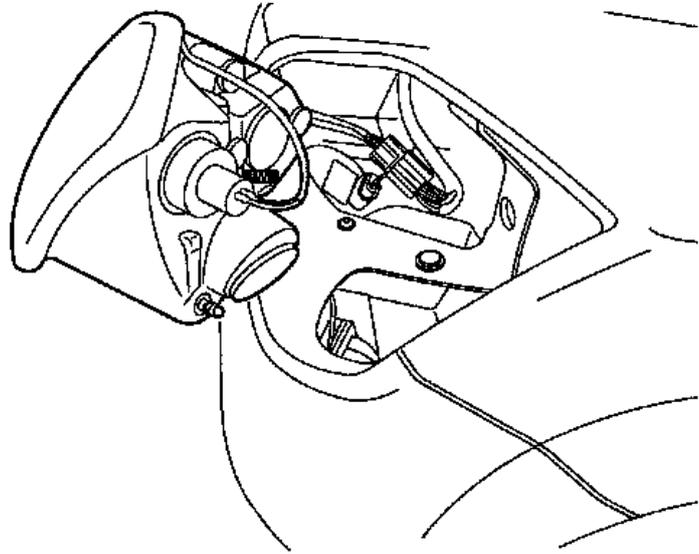

S 0784



### Install

Turn signal lamp to front lamp assembly.

Harness connector to bulb.

Trim cover to front lamp assembly – screws.

Front lamp assembly to front clam shell – harness connector, bracket, washer and nut.