

Bulb, Front Turn Signal Lamp, Replace

Open front bonnet for access to nut at rear of front lamp assembly.




Remove

Front lamp assembly from front clam shell – nut, washer, bracket and harness connector.

Trim cover from front lamp assembly – screws.

Bulb and holder from turn signal lamp.

Bulb from holder.

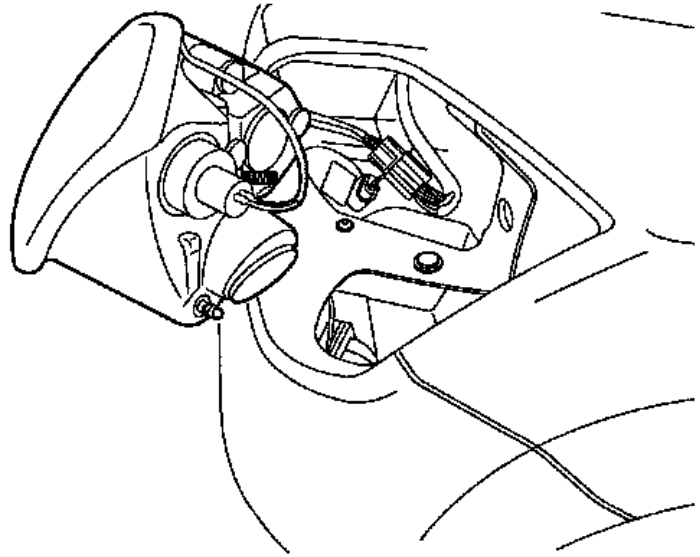

S 0784



Install

Bulb to holder.

Bulb and holder, to turn signal lamp.

Trim cover to front lamp assembly – screws.

Front lamp assembly to front clam shell – harness connector, bracket, washer and nut.