

Side Repeater Lamp, Remove and Install



Remove

Side repeater lamp from front wing, by depressing retaining lugs.


Harness connector from side repeater lamp, retaining tag.



Install

Harness connector to side repeater lamp.

Side repeater lamp to front wing.

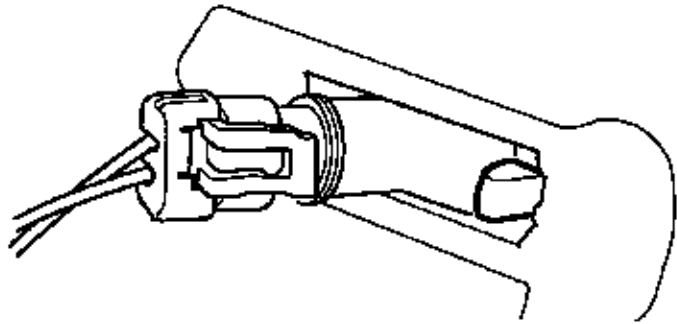

T 8878