

## Bulb, Side Repeater Lamp, Replace



### Remove

Side repeater lamp from front wing – depress retaining lugs.

Lens from lamp body.

Bulb from holder.




### Install

Bulb to holder.

Lens to lamp body.

Side repeater lamp to front wing.

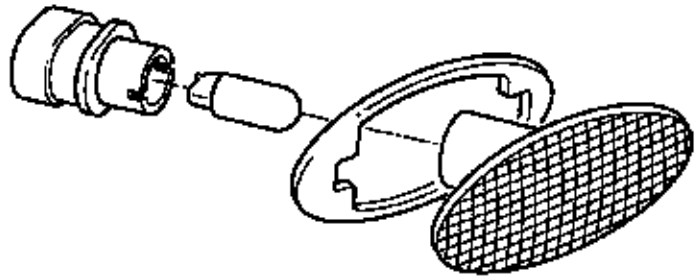

**T 9143**