

Rear Lamp, Remove and Install



Remove

Harness connector from rear lamp assembly.


Rear lamp assembly from rear clam shell – nuts.



Install

Rear lamp assembly to rear clam shell – nuts.

Harness connector to rear lamp assembly.

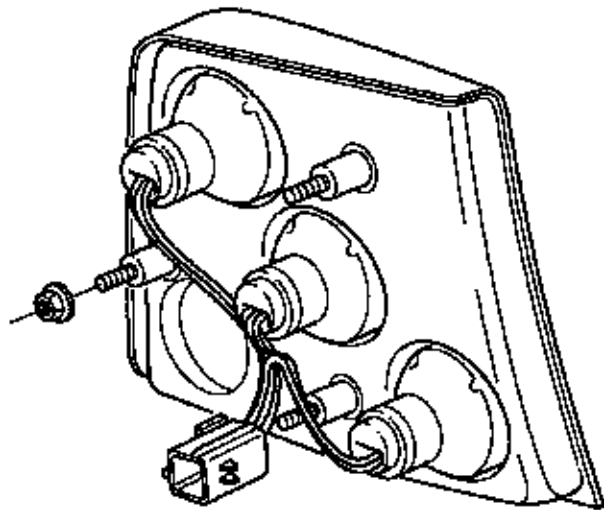

T 9144