

Bulb, Interior Lamp, Remove and Install



Remove

Interior lamp from instrument panel – push the lamp at the switch end in the direction of the arrow against spring to release lamp body from panel, then pivot lamp to remove.


Bulb from lamp.



Install

Bulb to lamp.

Interior lamp from instrument panel – place lamp into panel opening with spring end first then pivot into position.

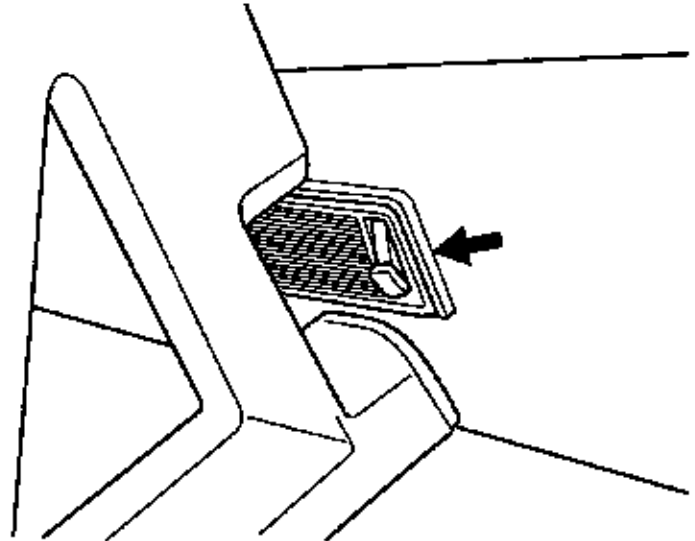

T 9102