


Switch Lighting Assembly, Remove and Install

Switches for operating side, head, hazard front drive and rear fog lamps are all grouped together in this switch assembly.



Remove

Plastic facia panel around lighting switches from instrument panel (double sided sticky pads).

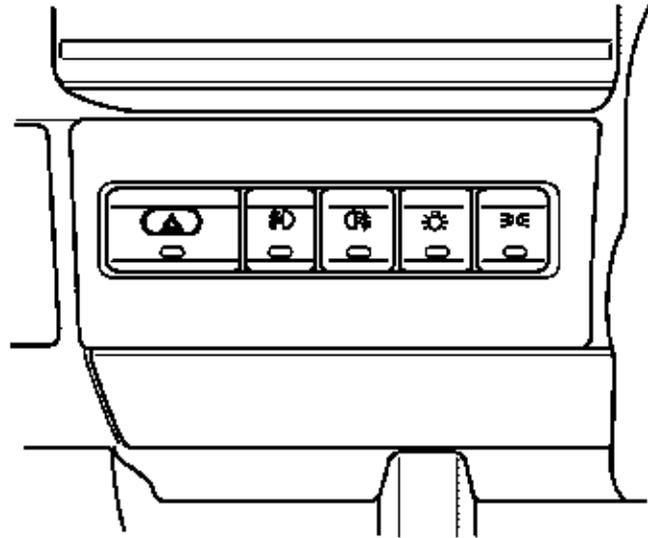

T 9093

Lighting switch assembly fro instrument panel – release retainers arrowed.

Harness connectors from switch to be replaced.


Lighting switch, from switch assembly housing.



Install

Lighting switch to switch assembly housing.


Harness connector to lighting switch.

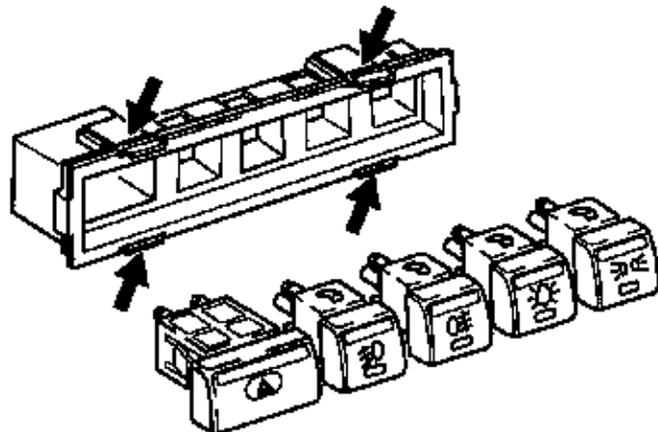

T 9103

Lighting switch assembly housing to instrument panel.

Plastic insert facia panel to instrument panel –
replace double sided sticky pads.

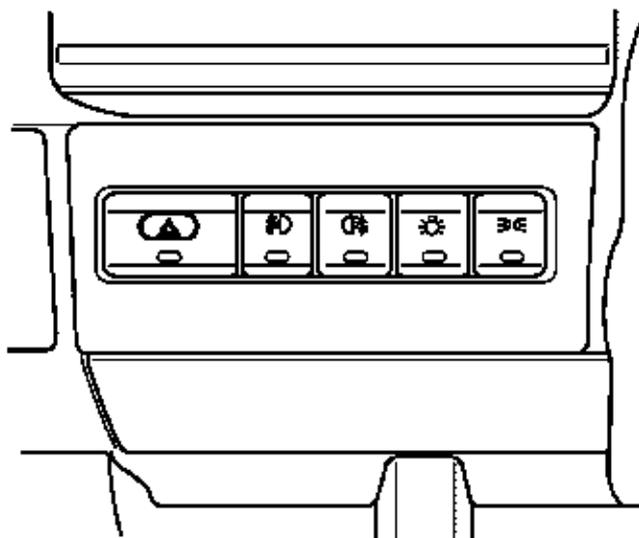

T 9093