

Brake Fluid Level Sensor, Replace



Remove

Brake fluid from reservoir arrowed (take care to avoid any spillage).

Harness connector from level sensor for brake fluid.

Reservoir from brake master cylinder.



Install

Reservoir to brake master cylinder.

Harness connector to level sensor for brake fluid.

Refill brake fluid to correct level.

