## Control Unit, Anti-Theft System, Remove and Install




## Remove

Instrument pad assembly – see operation "Instrument Pad Assembly, Remove and Install".

Harness connector from control unit.

Control unit from instrument panel – bolts.

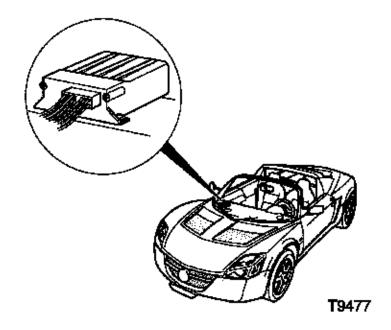



## Instal

Control unit to instrument panel – bolts.

Harness connector to control unit.

Instrument pad assembly.