


Switch, Bonnet, Remove and Install



Remove

Sealing bellows from switch.

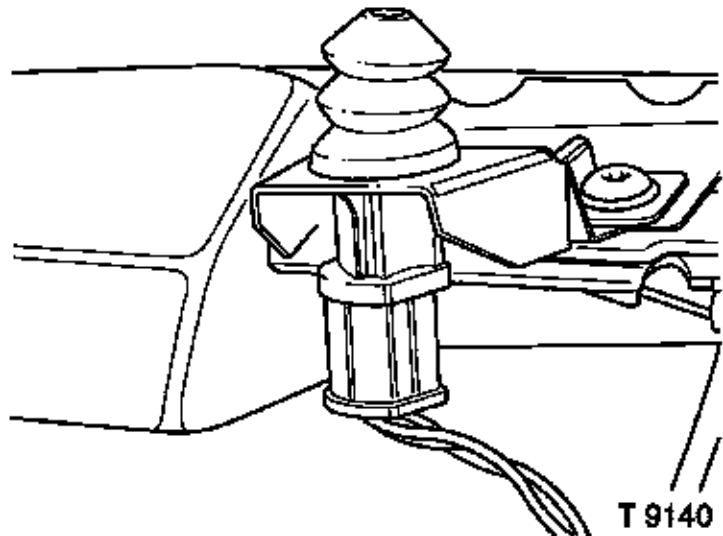

Harness connector from switch.

Switch from bonnet lock mounting bracket.



Install

Switch to bonnet lock mounting bracket.

Harness connector to switch.

Sealing bellows to switch.

