Switch, Door Contact, Remove and Install



Remove

Switch from door aperture – screw.

Harness connector from switch.



Inetall

Harness connector to switch.

Switch to door aperture - screw.

