

Switch, Engine Cover, Remove and Install



Remove

Sealing bellows from switch.

Harness connector from switch.

Switch from mounting panel.




Install

Switch to mounting panel.

Harness connector to switch.

Sealing bellows to switch.

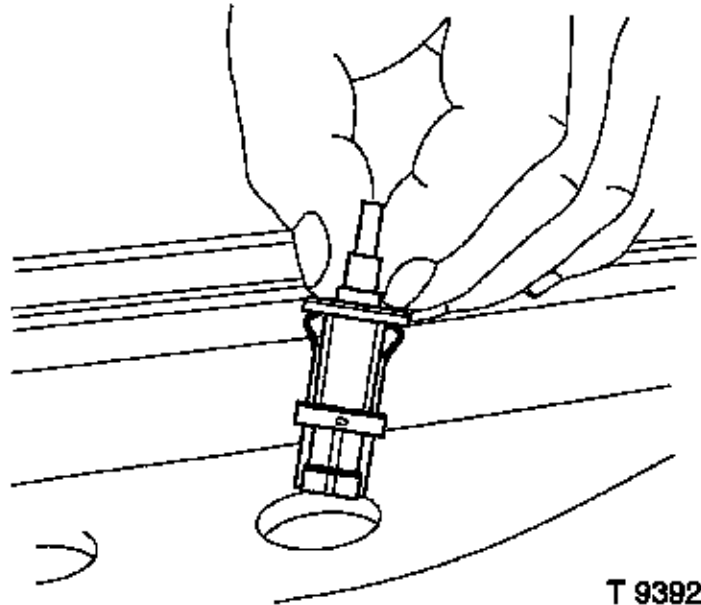

T 9392