Wiper Arm, Replace



Remove

Cover from arm.

Arm from splined and tapering drive shaft – bolt and washer.



Inetall

Arm to splined and tapering drive shaft (check arm position) – bolt and washer.

Cover to arm.

