

Wiper Motor, Remove and Install




Remove

Wiper arm – see operation "Wiper Arm, Replace".

Rubber seal from drive shaft.

Cover – plastic plugs.

Bonnet locking plate from mounting frame of wiper motor.

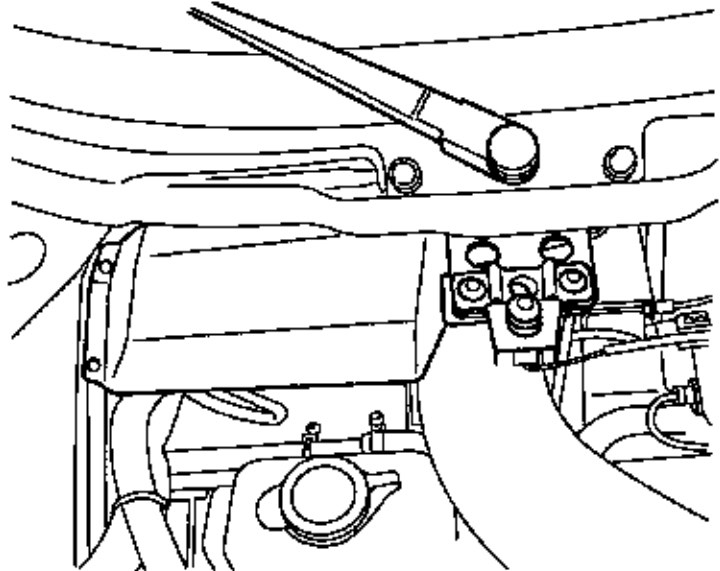

T 9464



Remove

Bolts holding mounting frame of wiper motor to front bulkhead.



Install


Bolts holding mounting frame of wiper motor to front bulkhead.

Bonnet locking plate to mounting of wiper motor frame.

Cover – plastic plugs.

Rubber seal to drive shaft.

Wiper arm – see operation "Wiper Arm, Replace".

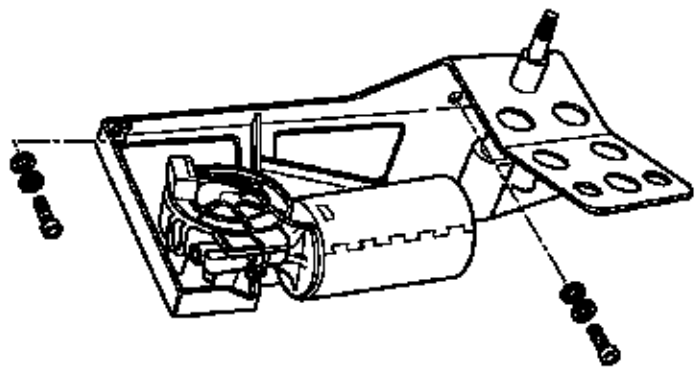

T 9465