


Oil Filter Housing

The oil filter is installed in a housing at the intake side of the cylinder block. Ports are provided at the rear of the housing for connections to an oil cooler and an oil pressure switch.

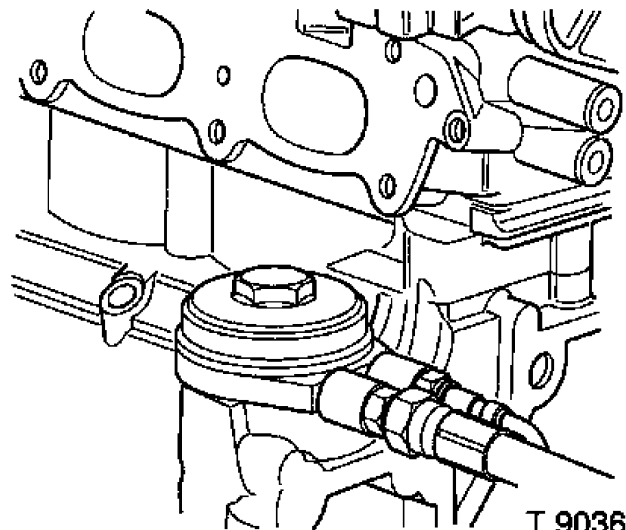

- **Service**

The oil filter cap is removed by means of Wrench KM-6150.