


Oil Pressure Indication

The oil pressure is monitored by means of a switch, which provides an output to the oil pressure telltale in the instrument panel.

The oil pressure switch is mounted in the cylinder block below the oil filter.

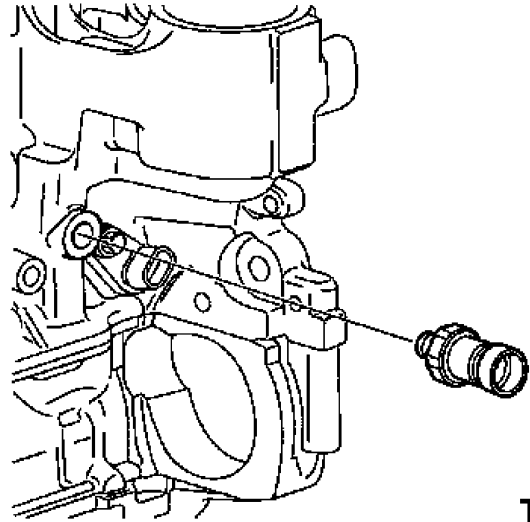

T 9074