


Thermostat Housing

The thermostat housing is secured to the cylinder head and is a push-fit into the water pump.

A port is provided in the thermostat housing for the coolant temperature sensor.

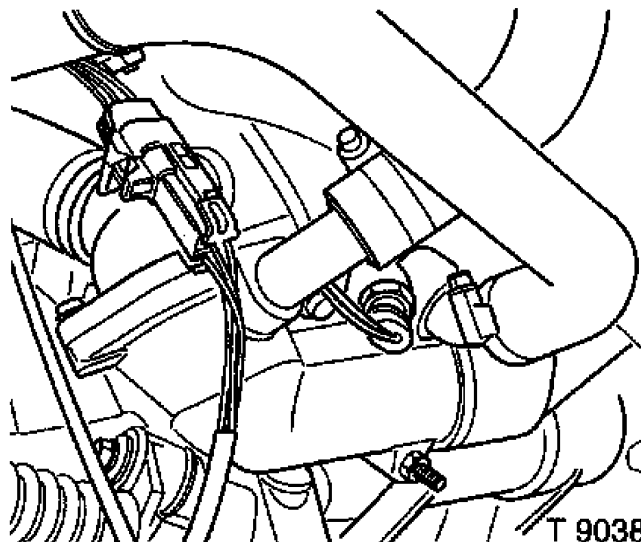

T 9038