## **Expansion Tank**

The expansion tank is carried over from the Astra-G.

A label with a level marking is attached to the side of the expansion tank.

The expansion tank is secured to a bracket in the engine compartment by means of bolts and nuts.

