


Engine Damping Blocks

The right, engine damping block assembly is attached to the timing end of the cylinder block and a rear longitudinal.

The left, engine damping block assembly is attached to the transmission and a rear longitudinal.

The torque reactions of the engine are absorbed by the front and rear engine damping block assemblies, which are both attached to the transmission, then the chassis or the sub-frame.

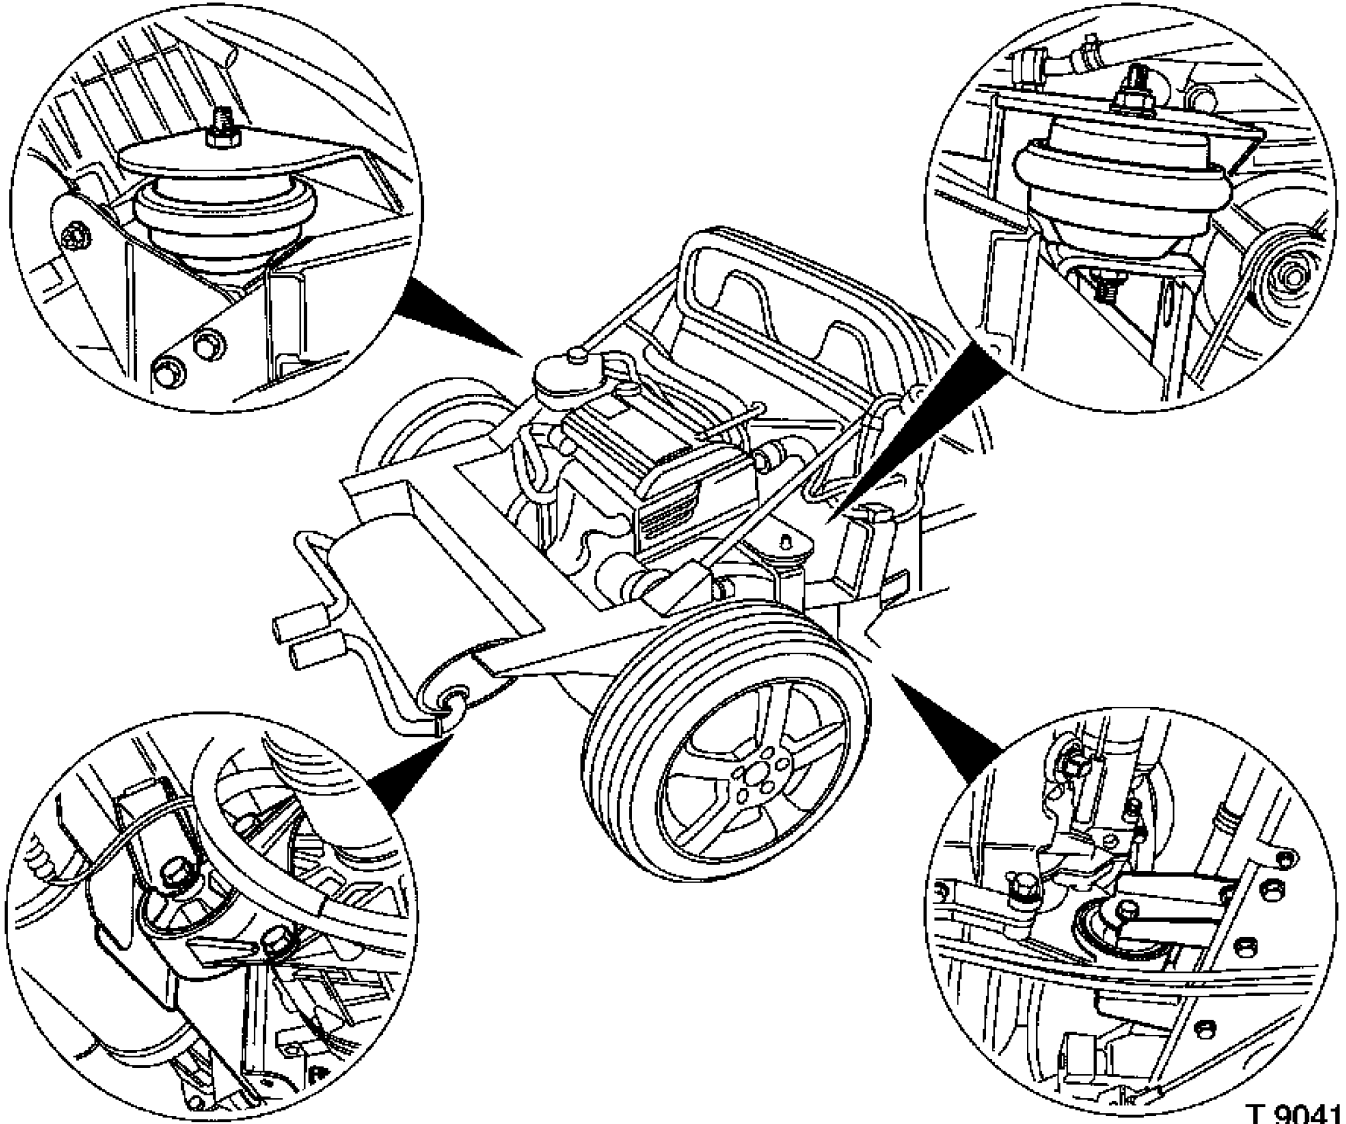

T 9041