

Coolant Temperature Sensor

The coolant temperature sensor is mounted in the thermostat housing and is a thermistor, whose resistance decreases as the coolant temperature increases.

The resistance of the coolant temperature sensor is monitored by the engine control unit for use in calculating the injection quantity and in operating the cooling fan.