


## **Intake Manifold Vacuum Sensor**

The intake manifold vacuum sensor is installed directly in the intake manifold and produces a voltage output, which is proportional to the pressure in the manifold.

This voltage output is used by the engine control unit as one of the parameters for calculating the engine load.

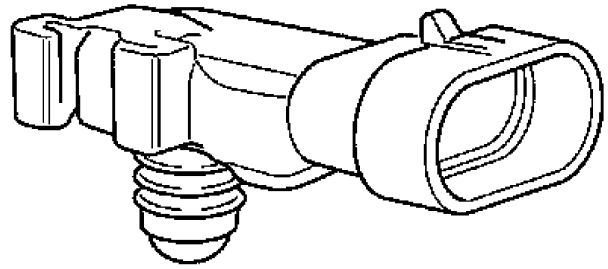

**T 9377**