

Knock Control Sensor

The knock sensor is located in the right side of the cylinder block and produces an a.c. voltage, which is applied to the engine control unit.

The amplitude and frequency of the voltage is proportional to the knock level in the engine. If necessary, the engine control unit will retard the timing of the ignition spark in accordance with that level.

