


Accelerator Pedal Position Sensor

The accelerator pedal position sensor comprises a potentiometer, which is connected to the accelerator pedal.

The output signal from the accelerator pedal position sensor is the main variable for the quantity of fuel that is injected.

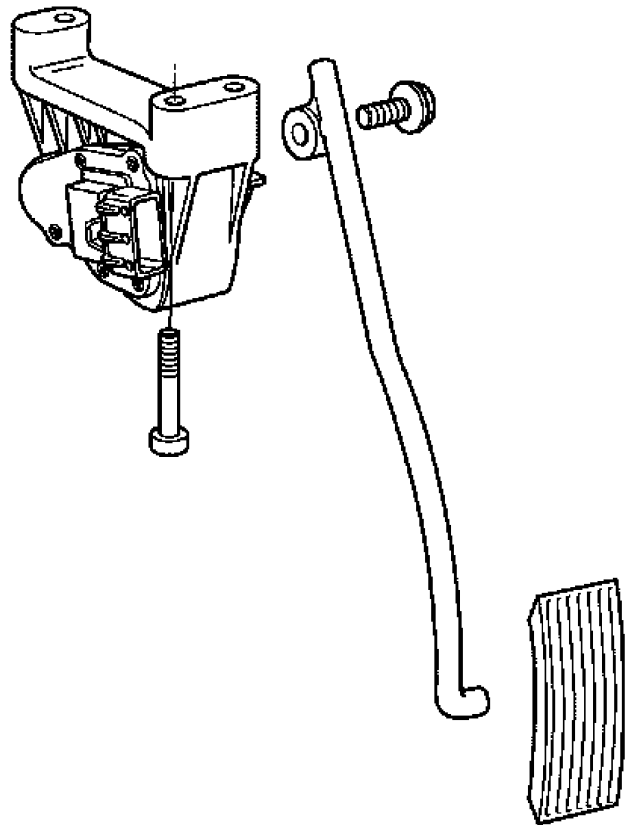

T 9083