


Ignition Module

The ignition module is installed on the cylinder head cover, above the spark plugs. The ignition module contains the components as follows:

- Two ignition coils.
- Four sparking plugs connectors.
- Multiway connector.

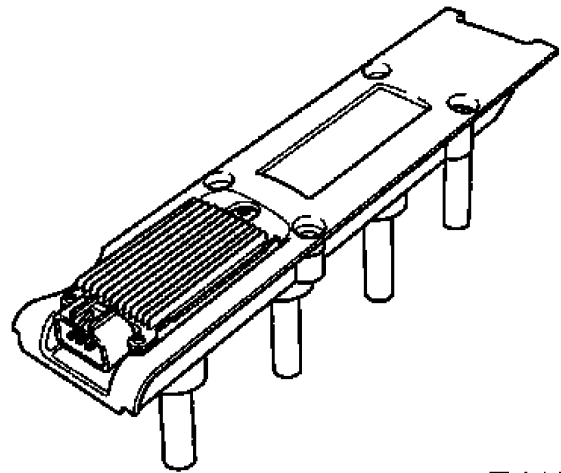

T 9254