

Special Service Tools


Engine, Engine Attaching Parts

KM-412-27

Adapter

To support the engine in conjunction with
KM-412

KM-412-27

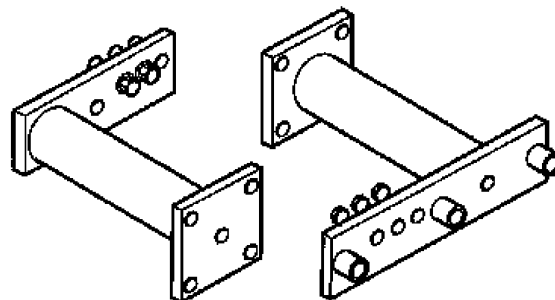


T 9273

KM-6077

Retainer

To lock the chain tensioner

KM-6077

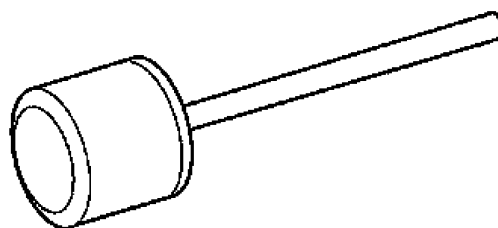


T 9280

KM-6105

Installer

To install the crankshaft front seal ring

KM-6105

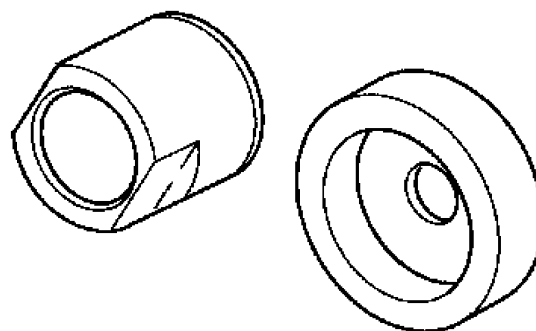

T 9281


KM-6106

Adapter

To check the engine oil pressure in conjunction
with KM-498-B

KM-6106



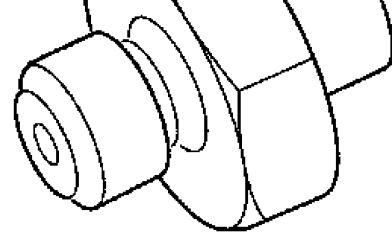


T 9282

KM-6148

Holding Tool

To hold the camshaft sprocket

KM-6148

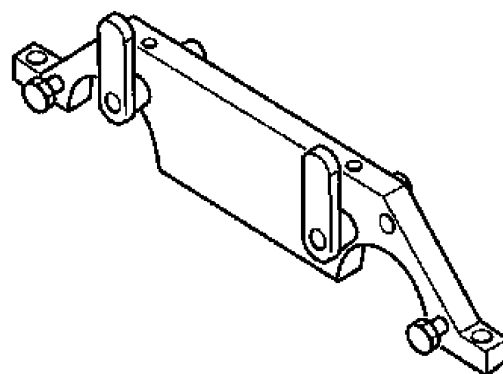


T 9283

KM-6149

Adapter

To remove and install the valve spring in
conjunction with KM-348

KM-6149

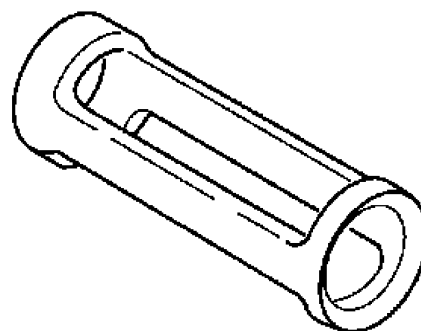


T 9284

KM-6150

Wrench

To remove and install the oil filter

KM-6150

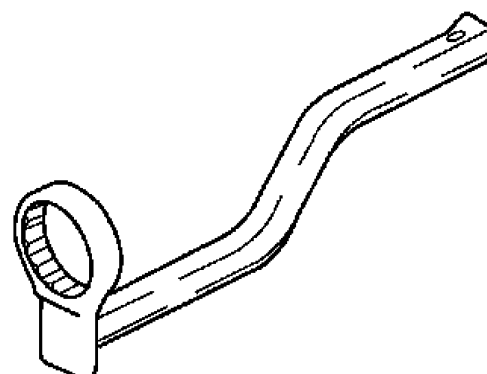

T 9285

KM-6151

KM-6151

Wrench

To release the ribbed V-belt tensioner




T 9286

KM-6152

Installer

To install valve stem seals

KM-6152

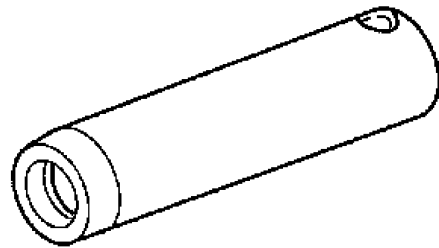


T 9287

KM-J-38122-A

Holding Adapter

To hold the crankshaft damper

KM-J-38122-A

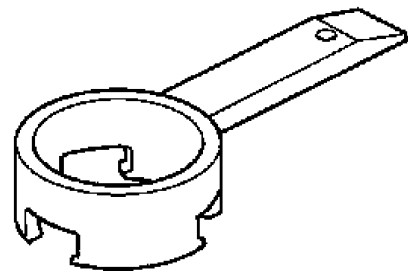


T 9288

KM-J-41742

Guide Pin

To guide the con-rod


KM-J-41742

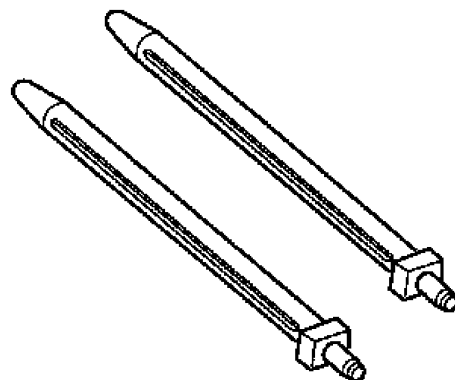

KM-J-42067

Installer

To install the crankshaft rear seal ring

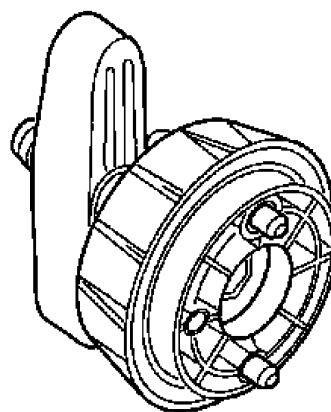
KM-J-42067

T 9290

KM-J-43651

Holding Tool

To hold the water pump sprocket

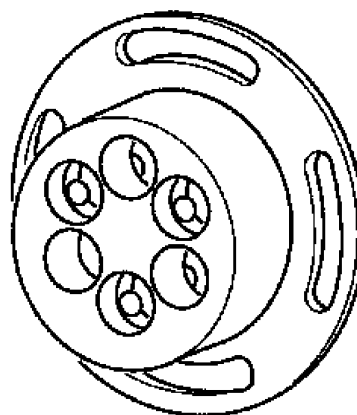KM-J-43651

T 9291