

## Oil Pressure, Check



**Remove**

Oil pressure switch – see operation "Oil Pressure Switch, Remove and Install".



**Install**

Adapter **KM-6106** to oil filter housing.


Oil pressure recorder **KM-498-B** to adapter **KM-6106**.



**Inspect**

Engine oil level, correct as required.

Oil pressure specification **4.0 – 5.6 bar** with the engine idling and at operating temperature.

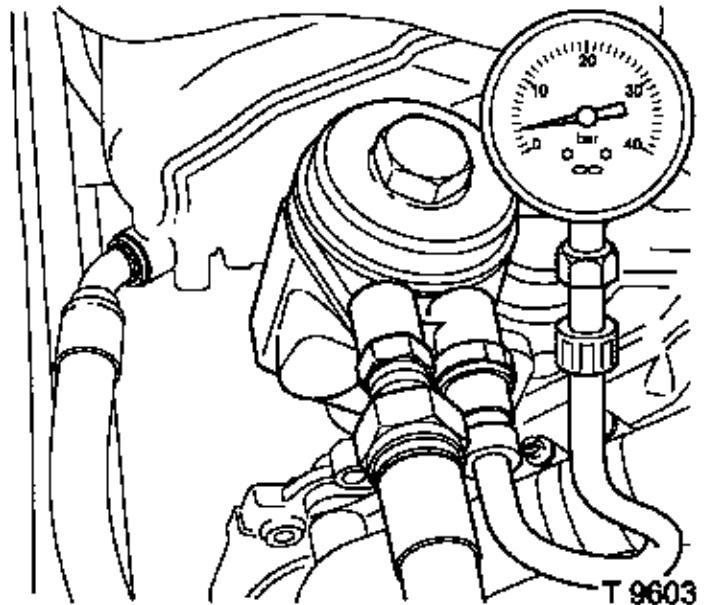

**Remove**

Oil pressure recorder and adapter from oil filter housing.



**Install**

Oil pressure switch – **18 Nm**.