

## Flywheel, Check



**Remove**

Flywheel – see operation "Flywheel, Remove and Install".



**Inspect**


Toothed ring for wear and damage.

Friction surface for wear and formation of thermal cracks.



**Install**

Flywheel.

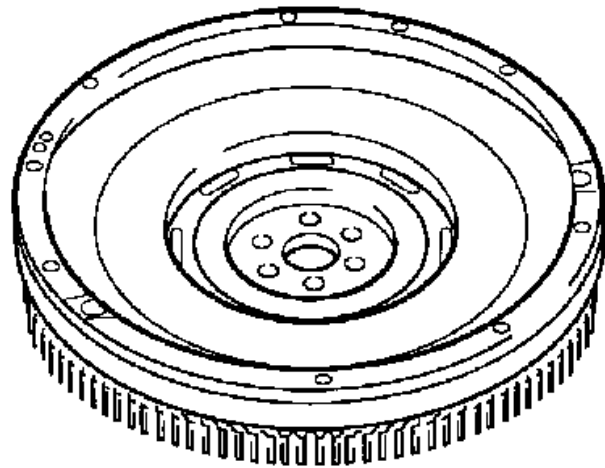

**U 9320**