

Fan Motor, Replace



Remove

Radiator – see operation "Radiator, Replace".


Fan from radiator – 4 bolts.



Install

Fan to radiator – 4 bolts.

Radiator.

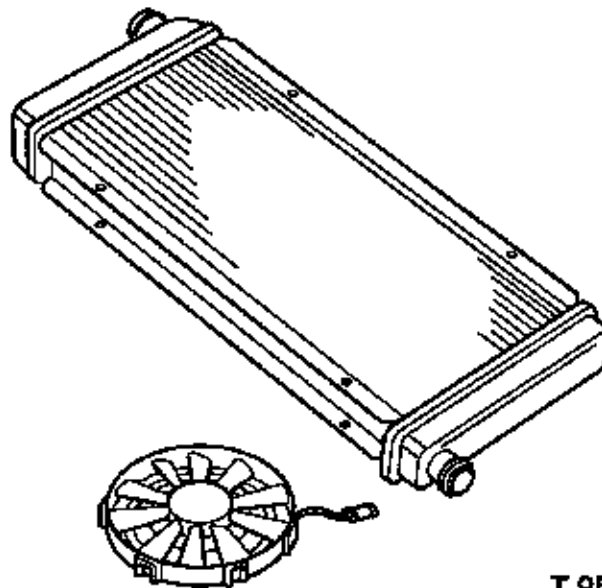

T 9599