

Ribbed V-belt, Remove and Install



Remove

Mark the running direction on the ribbed V-belt. Use a 3/8" tool to slacken the ribbed V-belt tensioner pulley (anti-clockwise) and take off the ribbed V-belt.



Install



Ribbed V-belt

Note the running direction and installation position of the ribbed V-belt.



Adjust

Use a 3/8" tool to slacken the ribbed V-belt at the tensioner pulley.

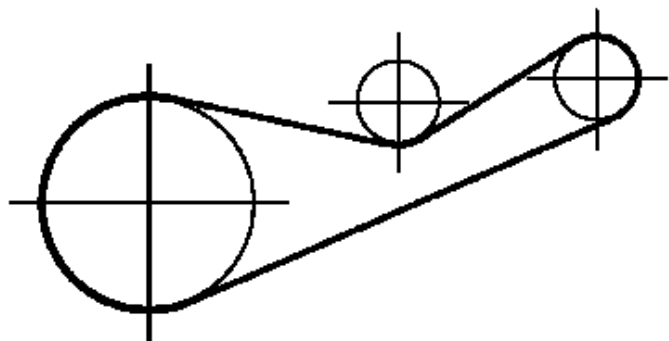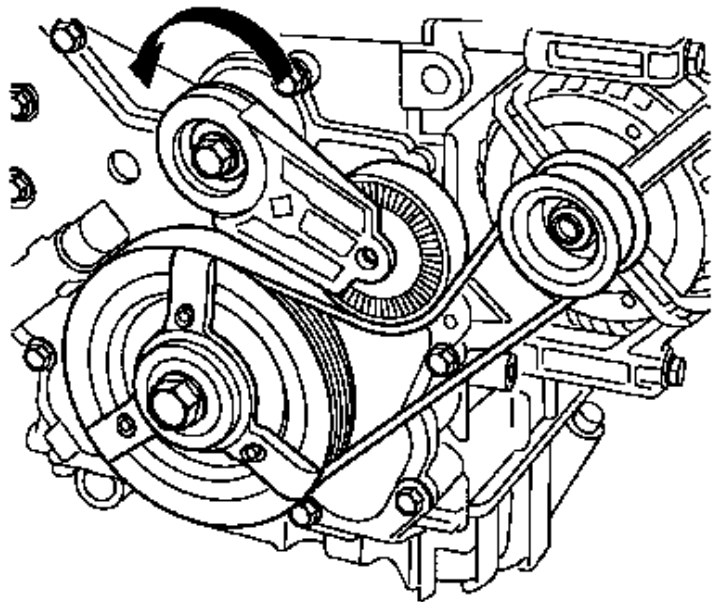

T 9501