

## Throttle Valve Housing, Remove and Install



### Remove

Hoses from the throttle valve housing.

Wiring harness connector(s) from the throttle valve housing.

Throttle valve housing from the intake manifold – bolts (arrow).




### Install

Throttle valve housing to the intake manifold – bolts (arrow).

Wiring harness connector(s) to the throttle valve housing.

Hoses to the throttle valve housing.

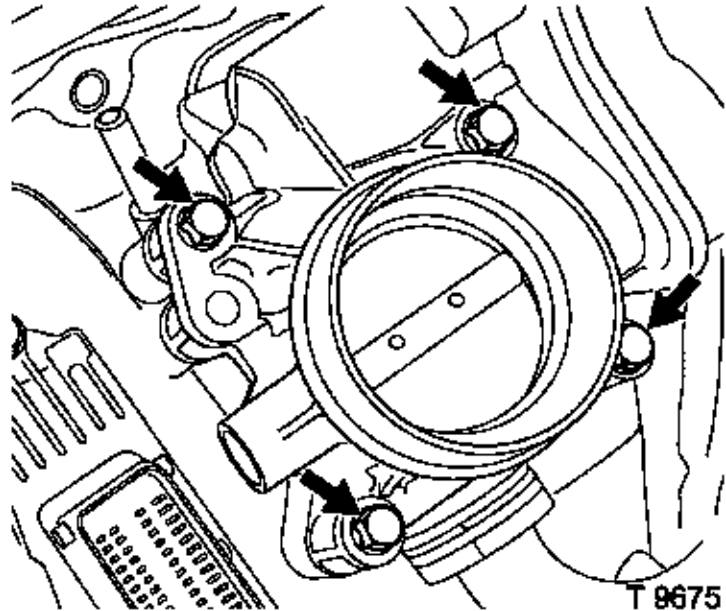

T 9675